


BDL 00 025 BDL 03 010 / 020 / 030
Ford Ranger - Mazda B2500 dal 98 al 2006
Extra Cab 2 o 4 Porte



BED STYLE

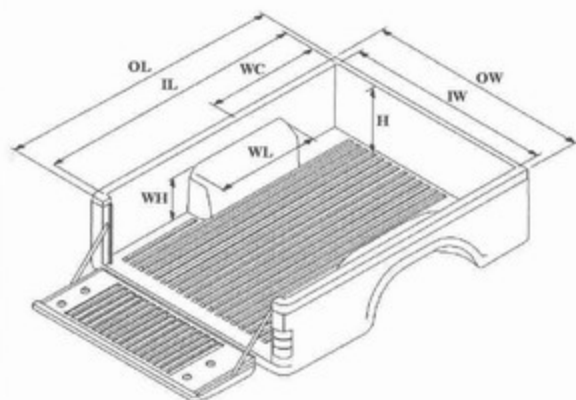

INSTALLATION KIT

- SELF FASTENER (NO DRILL - NO TOOL)
- RIVET & WASHER
- SUPER LOCK COMPATIBLE *
- U - LOCK
- IRON BAR
- OTHER



DIMENSION

Part Number	Make	Model	Bed Style	Size (mm.)							
				OL	IL	WL	OW	IW	WH	WC	H
		SpaceCab	Internal Rail	1815	1750	870	1545	1460	220	-	395