


BDL 03 070 / 071 Ford Ranger '07 e Mazda BT-50 Double Cab



INSTALLATION KIT

- SELF FASTENER (NO DRILL - NO TOOL)
- RIVET & WASHER
- SUPER LOCK COMPATIBLE
- U - LOCK
- OTHER

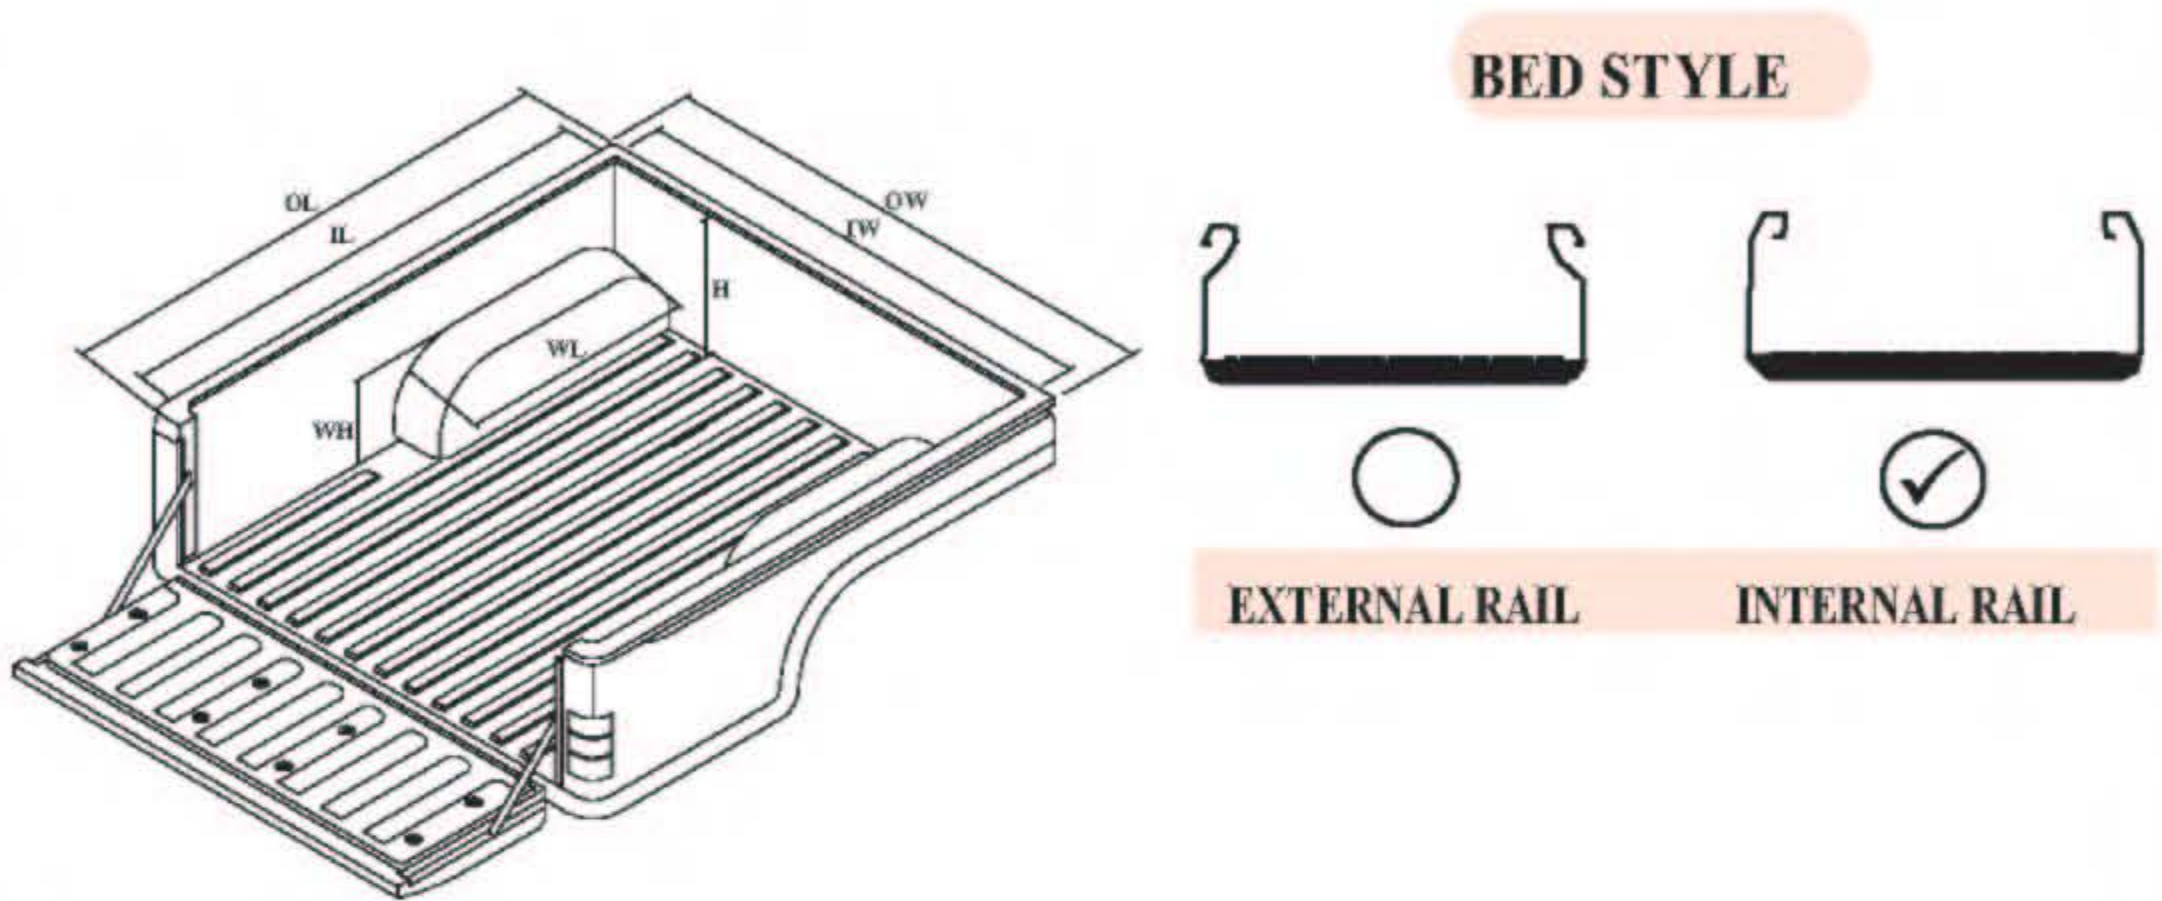

DIMENSION

PART NUMBER	MAKE	MODEL	BED STYE	Size (mm.) + 5 mm. Tolerance						
				OL	IL	WL	OW	IW	WH	H
	MAZDA BT-50	DOUBLE CAB	INTERNAL RAIL	1588	1530	800	1550	1461	230	460