


BDL 03 075 Ford Ranger '07 SuperCab e Mazda BT-50 Freestyle (Extra Cab)



INSTALLATION KIT

- SELF FASTENER (NO DRILL - NO TOOL)
- RIVET & WASHER
- SUPER LOCK COMPATIBLE *
- U - LOCK
- OTHER

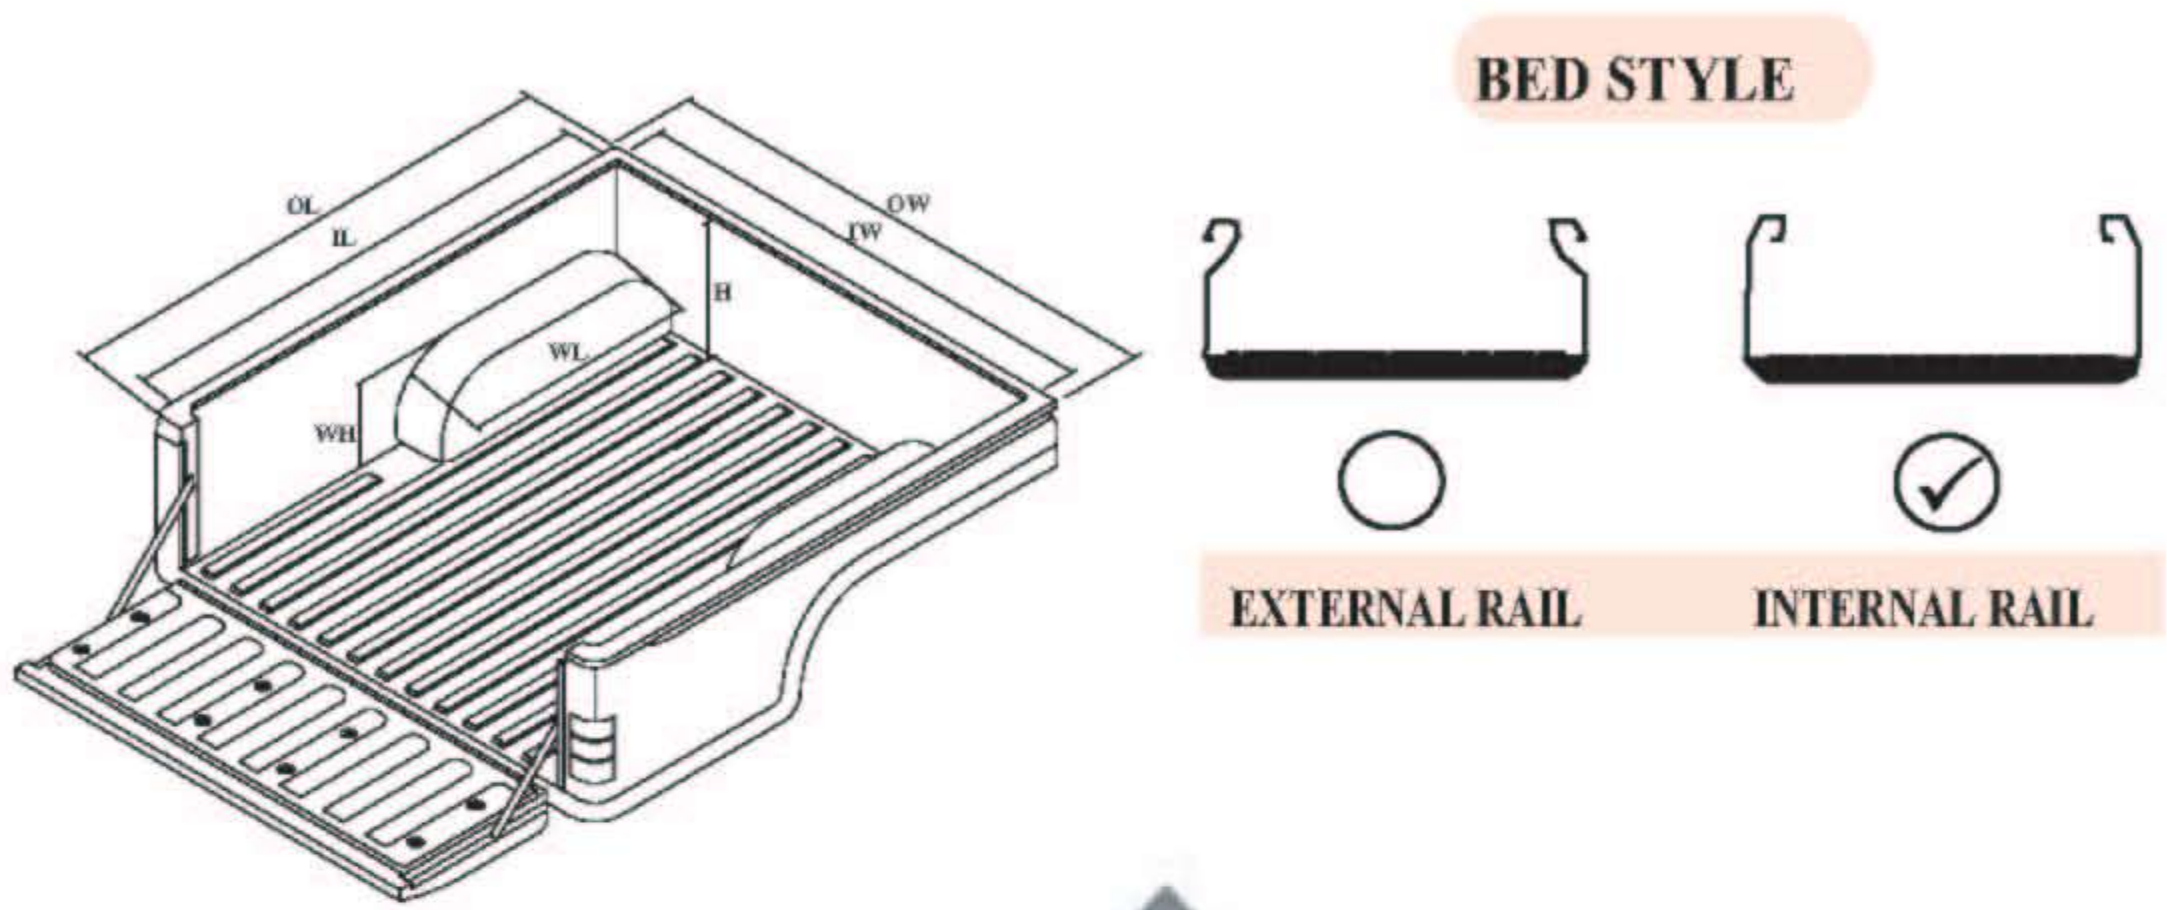

DIMENSION										
PART NUMBER	MAKE	MODEL	BED STYE	Size (mm.) \pm 5 mm. Tolerance						
				OL	IL	WL	OW	IW	WH	H
	MAZDA BT-50	CAB	INTERNAL RAIL	1820	1760	900	1535	1465	230	455